



2.0 Computer Multimedia Speaker

2

4

environment, prevent it from raining or rough handling and strong shock. * In order to avoid electric shock and other accidents, do not open the back panel cover for repair without professional

* Do not place the system in the high-temp and humid

Caution

1

SHENZHEN FENDA TECHNOLOGY CO.,LTD,GUANGDONG,PRC
ADD: Fenda Hi-Tech Park, Zhoushi Road, Shiyan, Baoan, Shenzhen, Guangdong, PRC
Tel: +86-755-2748668 (800 line) Fax: +86-755- 27353777 P.C.: 518108

- guidance. * In case fragments or other liquids is accidentally sprinkled inside the cabinet, please switch off the power immediately.
- * In case of repair,Please come to the professional maintenance for help. Switch off the power and take off the plug from the power
- * Keep it safe from water drops or splashing water, and no liquid container allowed to be put on its top side. * Keep the cabinet vent far from the wall by 20mm at least and the air vent should not be blocked.


jack when the system is not on work.

- Packaging content ① Speaker:
- ② RCA to RCA cable 1pc 3 3.5mm to RCA cable 1pc


1pc

8

④ Remote control 1pc ⑤ Operation manual 1рс

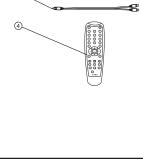


6 Connection cable

 

Panel key controls

Product wiring diagram

DVD/CD/LCD

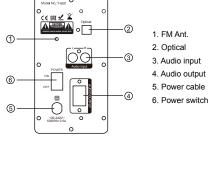

C. ◆ ◆)): Decrease or increase the volume level D. Source: Switch among BT/AUX/Optical/USB and FM E. MI/SCAN:

3

A. &: Turn on/off unit

start flashing fast.

a. USB Mode: Short press for play/pause the music

b. FM Mode: Short press to start Auto Search & this will store the found frequencies (channels) automatically. c. Bluetooth mode:short press to play/pause music.

play back.

a. USB mode: Short press to select previous song and long press to select previous folder. b. FM mode: Short press to select previous stored station. c. Bluetooth mode: short press to select previous song.

B. \$: Short press of this key will enter in to Bluetooth mode,

Long press will enter into pairing mode & display will

long press to select next folder. b. FM mode: Short press to select next stored station. c. Bluetooth mode: short press to select next song.

a. USB mode: Short press to select next song and

Panel instruction

F. **I≪**/CH-

3. Source button 4.Play/Pause/FM autoscan button 5.Previous/CH- button

1.Standby button

2.Bluetooth button

6.Next/CH+ button 7. Volume decrease button

9.USB port


11.Echo knob 12.Microphone jack 13.Microphone jack

Long press will enter into pairing mode & display will

P. Reset: short press to go to default settings.

8. Volume increase button

10.Microphone volume knob

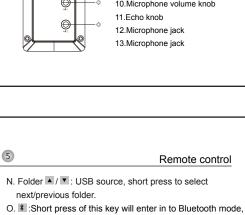

start flashing fast.

to automatically pairing.

Q.TRE+: increase treble level

TRE-: decrease treble level

Remote control

G. CH+/- (Mix+/Mix-): FM mode: select stored station.

station

Remote control

FM mode

 
A. U: turn on/off unit.

F Tune+/-: FM mode:

works for Manual tuning.

through Fine or Manual tuning.

Remote control keys function



song number in your USB device.

I. Enter: confirm selection and return to main screen. J. 0~9 number keys:

1. USB source: directly press numeric keys through

remote to select your favorite song if you know the

B. Source: Switch among BT, Optical, AUX, USB and

Fine Tuning: Short press to increase or decrease one

step (100Khz), Manual Tuning: Long press of this key

F. MEM: Short press of this key work to store tuned station

C. ■: press it to mute or unmute the sound.

D. • : increase or decrease master volume.

2. FM source: directly press numeric keys through remote to select your favorite station if you know the station number (1~100). Or press 3 or 4 digits of frequency to play that station, for example, 1026 for 102.6 MHz

K. ■: USB and BT source, short press to play or pause.

L. IM: USB and BT source, short press to select previous

- M. : USB and BT source, short press to select next song.

1. Bluetooth must be activated on the mobile end device

2. The mobile end device must support Bluetooth A2DP

3. The mobile end device must be within range of the F&D

4. You now have 30 seconds to register your mobile end device

which you want to connect with F&D T-60X

5. Start the search on your mobile end device

BASS+: increase bass level BASS-: decrease bass level

> œ • (H) 6

@

④ ⑦ ⊕ ⑤ (5) 6

(8) (9) 3

Pairing a bluetooth device supporting NFC If your Bluetooth device supports Near Field Communication (NFC), make sure that NFC feature is activated. Touch the

NFC area of your Bluetooth device to top of T-60X in order

Note: 1. If your phone has NFC support but it is running an

OS below Android 4.1, you will need to download an NFC

Bluetooth APP from Google play or a similar online store.

automatically search the Bluetooth device and connect it.

If the device paired before. If can't find paired device, it will enter pairing mode automatically and the display will flash quickly. Bluetooth device should active "Bluetooth" function

Notice: After switch to Bluetooth source, the unit will

during pairing and search for "Fenda T-60X".

1. Short press to switch audio source to AUX mode.

2. Adjust volume while playing music.

2. Adjust volume while playing music

Connect the speaker with audio source through signal

cable (output interface of devices as TV, PC, Mobile

 Short press to switch audio source to Optical mode. Connect the speaker with audio source through Optical

3. To play digital optical audio well on T-60X, please make

sure to set "PCM mode" as digital output on your devices, such as Blue-ray DVD, TV and Video player, etc. Below

6. If the mobile device requires an access code, please enter 0000 7. Once confirmed, the connection will be done automatically and be will appear in the display

Operation guidance

Playback via Bluetooth

Basic Requirement

T-60X(max.10m)

1. Select ^找 input

2. Long press the 3

Steps need to be followed

3. be will appears on the display



8

Replace battery, observe correct polarity at insertion

Digital output on the

source device not activated (please refer to device instructions).

Check the connection of the source device to

the F&D System and change the cable if necessary.

put your Bluetooth

device close to the

please restart the

speaker and try again

not bend optical cable over 50 degree

speaker

6

the input for Bluetooth playback has been selected. in this case the message be will appear. 2. Start the playback of a medium on your mobile end device

 
Please note:

and the sound will automatically be generated by the F&D System. USB mode

1. the device most recently connected to the F&D System connects automatically when Bluetooth is activated and

Ψ

3. Play music (refer to remote control function)



AUX mode

phones, etc).

Optical mode

signal cable

as example:

- - **F80** WARRANTY CARD

END-USER'S COPY WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: __

Last Name: __ Address: _ Contact No.: _ Product Name: _ Model No.: _

Serial No.:

Invoice No.: _

Date Purchased: _

Retail Outlet Where Purchased: _

Plug in USB driver 2. Card reader supporting max 32GB as well as MP3/WMA dual formats decoding

Specifications

Speaker Unit:

oo soft

F&D System does not respond to remote control.

No sound reproduction

No sound output under optical mode

Output power (RMS):55WX2

Tweeter: 1" 8Ω

Full-range speaker: 4" 8Ω

set too low

The battery is empty

Source device not

Cable not correctly

connected/faulty cable

distance is far from


device in Bluetooth mode

Bluetooth device not

connected successfully

optical cable not connect well or damaged

producing any signal.

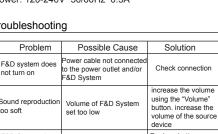

WARRANTY TERMS & CONDITIONS
The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of FRD product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow: 1. The warranty covers services by our FRD Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
2. Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our processory A. Parts: 1 year B. Technical service free. 1 year
Under the following circumstances, service and parts will be chargeable even within the warranty period: A. Failure to present the warranty card and receipt when servicing is required.

A. Falling to p. 1. Servicing its required.
Full particulars not clearly shown or alterations made against

the actual information.

For e.g.: Alteration of the date of purchase, serial numbers-altered or removed.

B. This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occuring in transit by or from the cumtomer.

C. The defect is caused by the attack of household pests, fire, lighting, natural disasters, pollution, abnormal voltage or the usage of generator.

Shenzhen Fenda Technology Co., Ltd. Add : Fenda Hi-Tech Park,Zhoushi Road,Shiyan,Baoan,Shenzhen,China P.C. : 518108 Http://www.fenda.com

(Please print the name & address)

SECTION 1

F80 WARRANTY CARD WARRANTY TERMS & CONDITIONS

event of loss. 2. Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our <u>F</u> <u>F</u> <u>sex</u> Authorised Dealer. (Parts would be replaced when necessary) A. Parts:...

Full particulars not clearly shown or alterations made against the actual information. For e.g.: Alteration of the date of purchase, serial

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of

Mr./Mrs/Ms First Name: ___

Last Name: __

Model No.: _ Serial No.: _

Invoice No.: __

Date Purchased: __

Retail Outlet Where Purchased: _

Address: _ Contact No .: _ Product Name: _

DISTRIBUTOR'S COPY WARRANTY REGISTRATION CERTIFICATE

SECTION 2

(Please print the name & address)

purchase. We guarantee the provision of free services of \(\begin{align*}{l} \mathbb{Z} \) product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow:

1. The warranty covers services by our \(\begin{align*}{l} \mathbb{Z} \) Authorised Dealer. The barranty covers services by our \(\begin{align*}{l} \mathbb{Z} \) Authorised Dealer. This warranty covers services by our \(\begin{align*}{l} \mathbb{Z} \) Authorised Dealer. This warranty covers services by our \(\begin{align*}{l} \mathbb{Z} \) and we have several dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the

For e.g.: Alteration of the date of purchase, serial numbers-altered or removed.

B. This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occuring in transit by or from the cumtomer.

C. The defect is caused by the attack of household pests, fire, lighting, natural disasters, pollution, abnormal voltage or the usage of generator.

Shenzhen Fenda Technology Co., Ltd. Add : Fenda Hi-Tech Park,Zhoushi Road,Shiyan,Baoan,Shenzhen,China P.C. : 518108 Http://www.fenda.com